


包装信息	型号：SP-70 成品尺寸：110*160MM 材质：128g铜版纸，折页 工艺：四色印刷 版本号：V1.3-20230601	备注信息	三折页（美国版） 较V1.2版本调整了文字信息(减少啸叫)
------	---	------	----------------------------------

正面

 
SUDOTACK

WIRELESS
KARAOKE SYSTEM
SP-70



User Manual

Sperker and Microphone

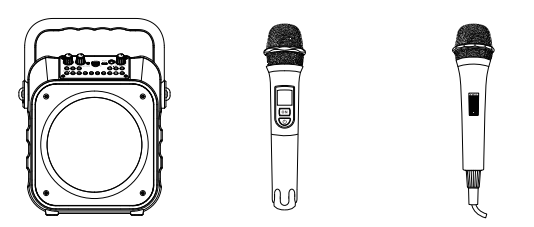

Portable Speaker Wireless Microphone Cabled Microphone

* Microphone types and quantities may differ in different bundles. Please confirm before purchasing.

 
Product Description

SUDOTACK SP-70 multi-functional Karaoke machine system includes handheld wireless microphones and a 6.5-inch HD speaker whose amplifying distance reaches 49ft/15m. The powerful TWS function allows you to pair two SUDOTACK SP-70 systems for stereo effect. There are independent control buttons for microphone volume, reverb, colorful RGB lights on/off, etc. Functions such as built-in 87.5-108MHz radio, Aux-in, TF slot, and USB Flash Drive port offer various playback options to play MP3, WAV or other audio formats. You can also know the working status via clear digital display. SUDOTACK SP-70 portable Karaoke system is medium-sized and has a fashionable looking. The high-voltage system ensures enough volume boost, and the internal large-capacity rechargeable lithium-ion battery guarantees long working hours. The system is ideal for family party, outdoor performance, teaching, etc.


Features

- TWS connection mode:
How to enable the TWS connection function?
1. Turn on two speakers at the same time.
2. Double-click the "Play/Loop" button on either speaker.
3. Wait for the two machines to pair up.
4. Turn on your phone's Bluetooth function and select either speaker to connect.
5. After the successful Bluetooth connection, the two speakers can play a piece of music at the same time.
Attention: Do not operate both speakers simultaneously.
Disconnect TWS: Long press the "Play/Loop" button, long press once to exit TWS mode, and long press again to disconnect Bluetooth.
Bluetooth Connection: Short-press the "Mode/LED" button on the karaoke machine to switch to Bluetooth mode. Then go to phone Settings>Bluetooth. Find and tap "SP-70 Wireless Karaoke System" and wait for the connection to be successful.
Bluetooth Disconnect: Long press the "Play/Loop" button to disconnect Bluetooth. You will need to reconnect next time you use it.


Button Functions

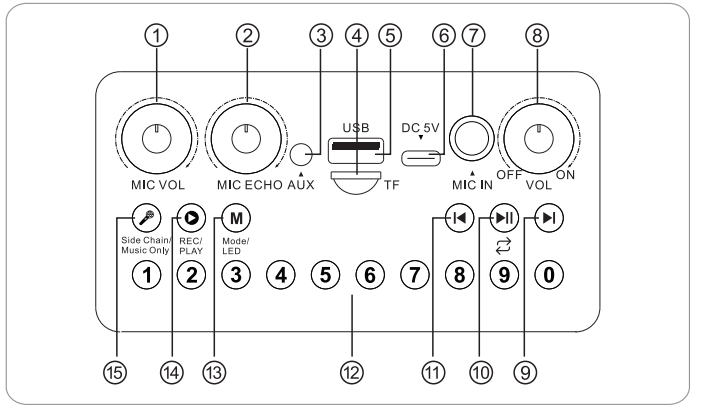

1. **Mic volume knob:** Turn the knob clockwise to increase mic volume, turn the knob anticlockwise to decrease or turn off mic volume.
2. **Mic reverb knob:** Turn the knob clockwise to increase mic reverb effect, turn the knob anticlockwise to decrease or turn off mic reverb effect.
3. **Accompaniment/Audio port:** Import accompaniment music and AUX.
4. **TF Card slot:** Insert TF card to playback MP3 files in it.




背面



To get technical support, please scan the QR code.
At the end of the manual, you can get a video on how to use


SP-70
WIRELESS
KARAOKE SYSTEM



FCC Statement


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following.

Technical Support
Support@sudotack.com
www.sudotack.com

 


V1.3-20230601


5. **USB port:** Insert USB flash drive to playback MP3 files in it.



6. **DC 5V Charging Port:** Use the included USB-C charging cable to charging the device via USB port of phone charger.

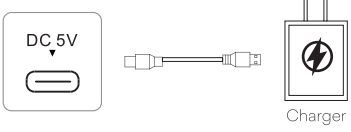

 7. **Mic/Instrument Port:** Supports cabled microphone and Instrument audio input.

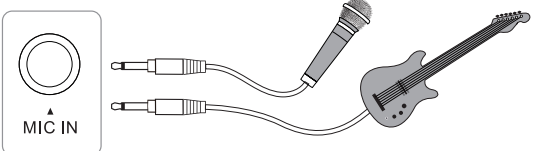

8. **Power/Volume Knob:** Turn the knob clockwise to turn on device, keep turning to increase volume. Turn the knob anticlockwise to decrease volume, keep turning to turn off device.









 
9. **Next Song:** Press the button to play the next song, long hold for fast forward. In radio mode, short press the button for next channel.

10. **[M] Play/loop Button:** Short press the button to play/stop playing. In MP3 mode, long hold the button to repeat playing a song or a playlist. *In radio mode, long hold the button to search for radio channel. In Bluetooth mode, long hold the button to disconnect. While playing audio, long hold the button to delete recording.*

11. **Previous Song:** Short press the button to play previous song, long hold the button for fast reverse. In radio mode, short press the button to play previous channel.

12. **Number Button(1-0):** Tapping two or more buttons to select songs. For instance, tapping button No.1 and No.2 to play the 12th song in USB flash drive or Micro SD card.


13. **[M] Mode/LED:** Short press to convert from radio mode, Bluetooth mode, audio input mode, MP3 mode. Long hold the button to switch light modes.

Mode	Short press		→		→		→					
		Radio Mode		Bluetooth Mode		Audio Input Mode		MP3 Mode				
LED	Long press											



14. **Recording/Playing Button:** Long hold the button to record, while recording, short press the button to end recording. Short press the button to play USB disk/TF Card audio. Please be noted the recording function is only available when there is a USB disk, TF card, cabled microphone/wireless microphone connected to the device)

15. **Music Only/Microphone Priority:** Short press the button to turn on/off microphone priority function. Long press the button to turn on/off music only.

 16. **Install battery for Microphone:** Please use 2pcs AA type batteries for handheld wireless Microphone, the battery uncluded in package.



Charging notes

 1. Battery symbol status: fully charged symbol , low battery symbol . Indicator light on indicates charging, indicator light off indicates fully charged.

2. Plug charging cable of charger to the product's DC 5V charging port to charge the device.

Cautious

Please charge the device via 10w or above charger, or you can use chargers with higher voltage than 5V/2A(10W).

Since there is built-in high capacity battery, please keep the product away from high-temperature environment.

Please fully charge the device for long-term storage.

How to prevent speaker howling?

1. Keep a distance between microphone and loudspeaker.

2. Lower down speaker volume.

3. Do not position the microphone in front of a loudspeaker.

Warranty Policy

Thanks for purchasing Sudotack products, please read user manual carefully before using products.

If you have any suggestions for us, please contact us in Order page or SUDOTACK official website. We will serve you wholeheartedly!

Official website: www.sudotack.com

Email: support@sudotack.com